

Classroom Projector




On

On remote, press



Off

On remote, press  twice. Note that when you turn off the projector in this way, to turn it back on, you must wait until the green light on the projector stops blinking. If you press Standby only once, it will not turn off.

To get a black screen:

On remote, press



Can't see computer screen?

On remote, press



Magnify what's on the screen

On remote, press




Adjust volume for movies or presentations

Use your computer speakers

Note: Volume controls on remote are not connected to any speakers so will not work


To spotlight a place on the screen

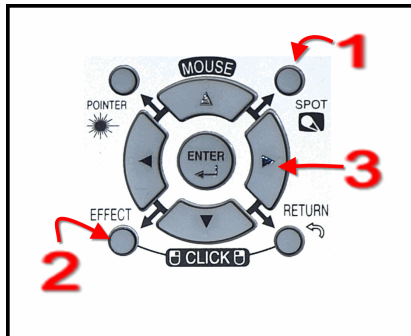

Windows® Internet Explorer™ 7

Creating New Tabs

- Click on small tab on right of open tab

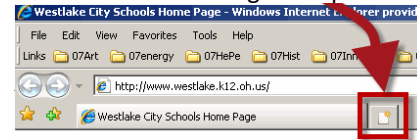

- Enter web address in field or use search engine



 
Opening links in new tabs

- Right-click* most any hyperlink. Choose *Open in New Tab*




Make tabs your Home Page for IE7

- Tools Menu




- Internet Options

 - Use Current



- Okay

Saving Favorites

- On toolbar, click 

- Choose *Add to Favorites*

- Type in a name (Optional: and direct to a folder)

- Click



Calling back Favorites

- Click 

- Find and click on favorite